

# Packaging Machines

---

# VC999 C6 Medical Chamber Machine



For stepless vacuuming, with or without gas flushing, for sealing Tyvek<sup>®</sup>, PA/PE and paper/film

---

# VC999 C6 Medical Chamber Machine



- More than 40 years of experience in building chamber machines
- Meets all international medical technology standards
- Equipped with a powerful high-speed vacuum pump
- A high-performance sealing machine for all types of medical packaging such as Tyvek®, PA/PE, paper/foil, etc. – one device for nearly all applications
- 10 mm sealed seam

---

# VC999 C6 Medical Chamber Machine



- IQ / OQ / PQ qualified, narrowest tolerances guaranteed
- Requalification by our trained VC999 Service Team
- Monitoring of temperature, pressure, time and vacuum, all parameters qualified
- Complete sealing chamber illuminated

---


# VC999 C6 Medical Chamber Machine



- Sealing bar length for simultaneous use:  
front 888 mm, right and left each 448 mm
- Max. possible product dimensions:  
approx. length 890 mm, width 490 mm, height 175 mm
- Soft air pre-ventilation, if desired, prevents piercing of bags by sharp-edged products
- Automatic opening and closing of lid

---

# VC999 C6 Medical Kammermaschine

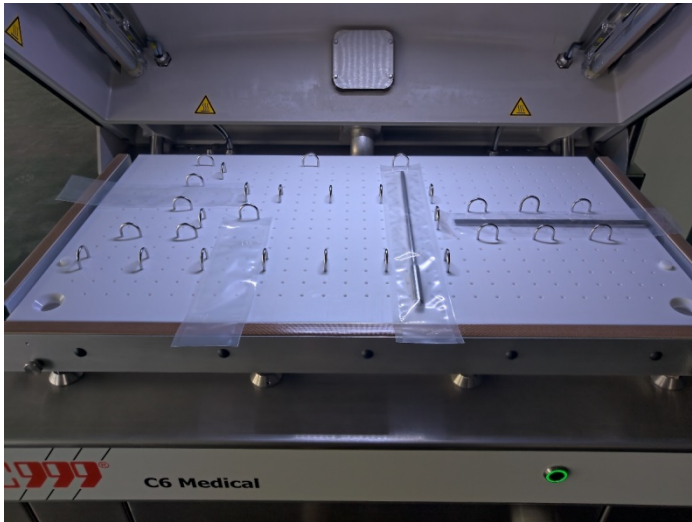

- **Positioning plate** guarantees sealing seam at 90° to the bag
- Customized design depending on bag sizes
- Simple, flexible adjustment without assembly